

ENTERPAD USER GUIDE

Congratulation for buying Canadialog Enterpad!

Introduction

Enterpad is a programmable keyboard that can be use to perform simple or complex tasks by pressing only one key. These tasks that we will call macros in this user guide can perform a complex keyboard shortcut, open a program, write long block of text based on your needs, open secure Web site, Etc.

Enterpad can host up to 460 macros. keys of Enterpad can perform up to 4 macros. Each key of P120 Enterpad can reproduce one or more keyboard regular keys. When pressing a key of Enterpad, it's possible to reproduce letters, numbers or any function key. With configuration software, it's possible to create an instruction file that will handle macros and transfer this file in Enterpad internal memory. Enterpad is also compatible with AutoHotKey to perform more complex macros. However, the AutoHotkey script needs to be install on your computer hard disk.

Physical description of Enterpad

Enterpad is rectangular. An USB cable is attached behind it. Please do not try to remove the USB cable otherwise the warranty will be voided. If Enterpad is placed on a flat surface, the top of Enterpad is slightly raised compared to bottom. Enterpad must be placed on a flat surface and the USB cable must be located on the back of the upper left corner. On top of Enterpad, you'll find a plastic sheet with small dots if you buy the adapted version from Canadialog. Each dots correspond to a key of your Enterpad. It's also possible to place a regular sheet of paper under the plastic sheet to add visual indications. To insert a regular sheet, raise the plastic sheet using the space for this on the opposite side of the USB cable.

A small speaker is also integrated in the Enterpad. This speaker allow Enterpad to play beep. After pressing a key, you'll hear a beep that will confirm the transmission of your action to the computer. A beep can also be hear in the following situations: when connecting the Enterpad to your computer to confirm establishment of link between Enterpad and your computer, during internal memory update process, if a technical problem occur, Etc. The speaker is located under the Enterpad in the upper right corner. You can observe a small round whole. Beep volume can be adjust. Please note that it's also possible to turn off beep if needed by contacting Canadialog technical support.

Enterpad keys are numbered and place this way. Each rows contain 10 keys and each columns 12 keys. First row on top contains from left to right keys from 1 to 10. Second row contains keys from 11 to 20. The key located in the bottom right corner is key number 120. Shift key is a special key located in the bottom left corner and this key is

named 111. This key allow you to activate secondary macro of a key. You'll need to press and hold shift key when pressing key that contains a second macro.

How to install basic template offer by Canadialog

To user Enterpad, you'll need to program your own macros or install our basic template that include over than 50 predefine macros. To download and install our template, please go to <http://enterpad.canadialogstore.com>. Before launching installation, please make sure that your Enterpad is connected to your computer. If your computer never communicate with your device, please wait a couple of minutes before launching the installation. Windows needs to detect and install the driver of the new device. After launching the installation, please follow instructions on your screen.

List of macros integrated in basic template from Canadialog adapted for JAWS

After installing Canadialog template, keys of your Enterpad will perform following actions:

- 1 - Go to desktop
- 2 - Open documents folder
- 3 - Open Microsoft Word
- 4 – Open Notepad
- 9 - Restart Windows
- 10 – Shutdown Windows
- 11 – Copy text in clipboard 1
- 12 – Copy text in clipboard 2
- 13 – Copy text in clipboard 3
- 21 – Paste text from clipboard 1
- 22 – Paste text from clipboard 2
- 23 – Paste text from clipboard 3
- 51 – Open Google Web site
- 52 – Open Gmail Web site
- 53 – Open Hotmail Web site
- 54 – Open Facebook Web site
- 55 - Open Twitter Web site
- 56 - Open Youtube Web site
- 57 - Open SQLA library Web site
- 58 - Open CNIB library Web site
- 59 - Open Canadialog Web site
- 81 – Go to address bar of Internet Explorer or Firefox
- 82 - Search text in a Web page
- 83 – Form fields list
- 84 – Heading list
- 85 - Link list
- 86 – Turn off form mode

- 87 - Clear cache of Internet Explorer and Firefox
- 99 - Say time and after date.
- 100 - Change default settings of JAWS
- 101 - Launch JAWS 17
- 102 - Quit JAWS
- 103 - Increase voice speed
- 104 - Temporary increase voice speed
- 105 - Change language (French France to American English)
- 106 - Select a voice profile
- 107 - Say current character phonetically
- 108 - Spell current word
- 109 - Read current selection
- 110 - PDF OCR
- 111 - Maximize current window
- 112 - Screen refresh
- 113 - Decrease voice speed
- 114 - Temporary decrease voice speed
- 115 - Change language (American English to French France)
- 116 - Turn on or off speech
- 117 - Display speech history
- 118 - Search JAWS shortcuts
- 119 - Launch Tandem
- 120 - Help (a dialog box will ask for the key you want information on)
- Shift 120: Refresh Enterpad
- Shift 119 - Help by exploring Enterpad
- Shift 118 - Turn off help by exploring Enterpad
- Shift 114 - Lower volume of beep sounds
- Shift 113 - Medium volume of beep sounds
- Shift 112 - Higher volume of beep sounds

Note: Keys 11, 12 and 13 allow to copy text in three different clipboard. Keys 21, 22 and 23 allow to paste content that was put in these clipboards.

Trouble shooting

Enterpad is plug to your computer, you can hear beeps when pressing keys but nothing happens:

- Press Shift 120 to refresh Enterpad and click on icon Enterpad on your desktop.
- Make sure that the Enterpad software has been installed on your computer and internal memory of Enterpad was successfully updated. If you're not sure that the installation was successfully completed, please run it again.

Enterpad doesn't play beeps when you press keys:

- Make sure that Enterpad is connected to your computer.
- Try to unplug Enterpad and plug it back 30 seconds later.
- Make sure Enterpad is present in Windows device manager.



1-888-730-0003

For all other technical problems, please contact our technical support.

Contact us

Canadialog
2001, Robert Bourassa, Suite 17023
Montreal, Québec, H3A2A6

Phone (toll free USA/Canada): +1-888-730-0003

mail: enterpad@canadialogstore.com